



### FEATURES AND SPECIAL FUNCTIONS

The CK6 features an integrated OLED display and several adjustable options for Sensitivity, Volume, NumPad / Touchpad mode and Function levels.

#### CONNECTING TO THE PC

1. Connect the keyboard to your PC or device via USB.
2. The CK6 works as a plug-and-play device – no driver installation is required.
3. Wait until the keyboard is automatically recognized.

#### 1 ADJUSTING TOUCH SENSITIVITY +

- ① The touch sensitivity can be individually adjusted.
- ② The current value is shown on the OLED display.
- ③ The setting increases step by step and stops automatically at the maximum level.



How to do it:

1. Hold **[Fn]** and tap **[F7]** repeatedly until the desired sensitivity is reached.
2. Release both keys to save the setting.

#### 2 ADJUSTING KEY CLICK VOLUME +

- ① The volume of the acoustic feedback (click sound) can be adjusted.
- ② The current value is also shown on the OLED display.



How to do it:

1. Hold **[Fn]** and tap **[F8]** until the desired volume is reached.
2. Release both keys to confirm the setting.

#### 3 LOCKING / UNLOCKING THE KEYS +

- ① The keyboard can be locked for cleaning.



How to do it:

1. Hold **[Fn]** and **[Keylock]** for about 3 seconds.
2. The OLED display shows the current lock status.
3. Repeat the process to unlock the keyboard.

#### 4 SWITCHING BETWEEN NUMPAD / TOUCHPAD +

- ① The right key area can be used either as a NumPad or as a Touchpad.

How to do it:

1. Hold **[Fn]** and the **Tab** key simultaneously.
2. The OLED display shows the current mode:
  - In Touchpad mode, the  symbol is displayed.
  - In NumPad mode, no symbol is displayed.
3. Repeat the process to switch between modes.

#### 5 NUMLOCK SETTING

- ① Activates or deactivates the standard NumPad functions.
- ② The current status is shown on the OLED display.\*

How to do it:

1. Press **[NumLock]**.
2. The status **NUM** is shown on the OLED display.
3. Press **[NumLock]** again to toggle the function.

#### 6 USING THE FN LEVEL + Function Keys with Fn Level

- ① By holding down the **[Fn]** key, additional functions become available (indicated by blue icons).

How to do it:

1. Hold **[Fn]**.
2. Press the desired function key.
3. Release **[Fn]** to return to the standard level.

\* Under macOS, a certain status is currently not displayed correctly on the OLED screen. This Quickstart Guide therefore refers exclusively to Windows® systems.